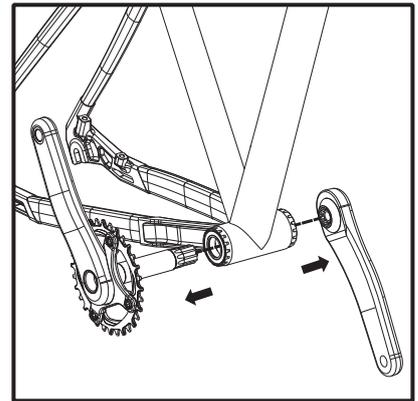
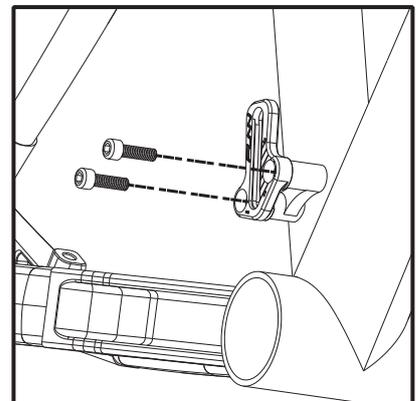


ZIPPA LITE E-TYPE / SRAM S3**STEP 1 :**


Remove the crankset from your bottom bracket. The bottom bracket does not need to be removed.

**STEP 2 :**

With the top guide removed mount the mounting bracket to the front derailleur mount.



**STEP 3 :**

Reinstall your cranks onto your bike.

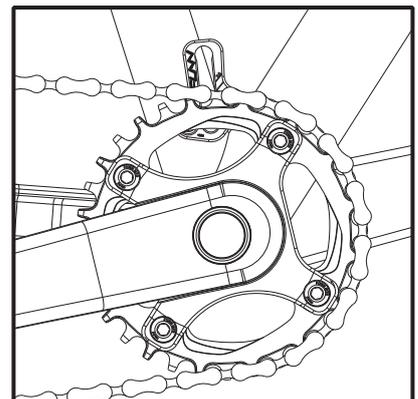


STEP 4 :

Install the top guide by screwing it into the mounting plate. Check to see if the top guide and chain are aligned properly. If the alignment is good skip to step 6.

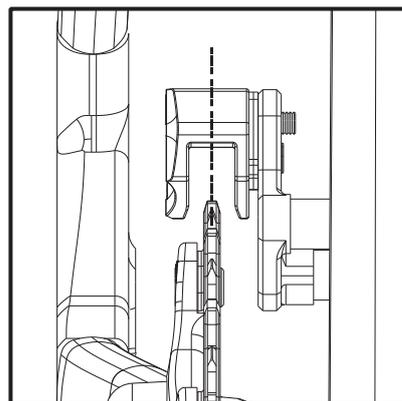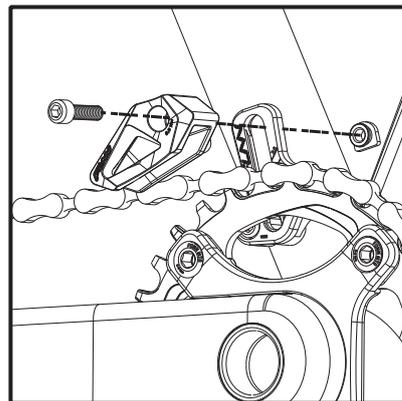

STEP 5 :

To achieve proper chain alignment, use the supplied spacers between the top guide and the mounting plate and tighten the fixing screw. Use the longer screw when more than one spacer is used.

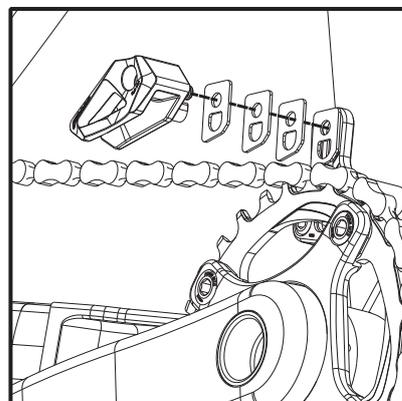

STEP 6 :

Adjust the height of the top guide so that it is as low as possible without making contact with the chain, chain ring or chain ring bolts.

