


SLINGSHOT EXTENSION COG ASSEMBLY INSTRUCTIONS

STEP 1

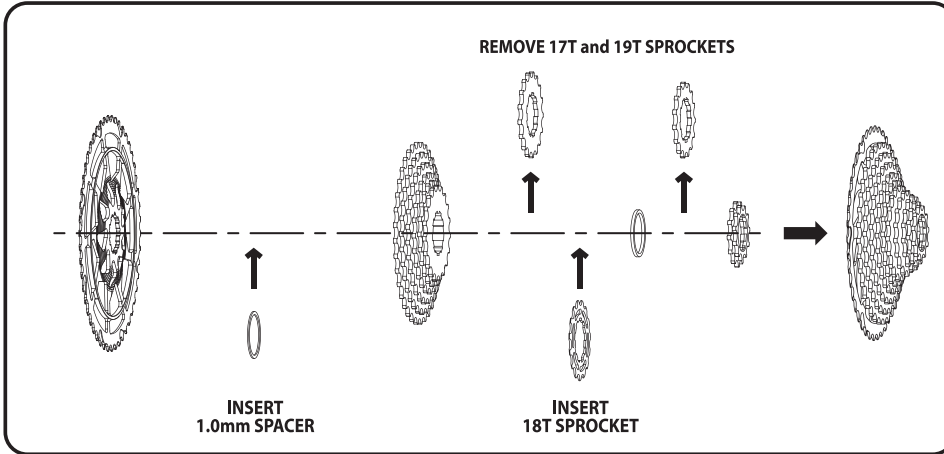


SLINGSHOT 50T + 1.0mm SPACER + SHIMANO 21-42T - (17T & 19T) + 18T + 11-15T = SPROCKET 11-50T



Depending on the original chain length, you may need to add 2 to 4 links of chain to achieve smooth shifting.

STEP 2

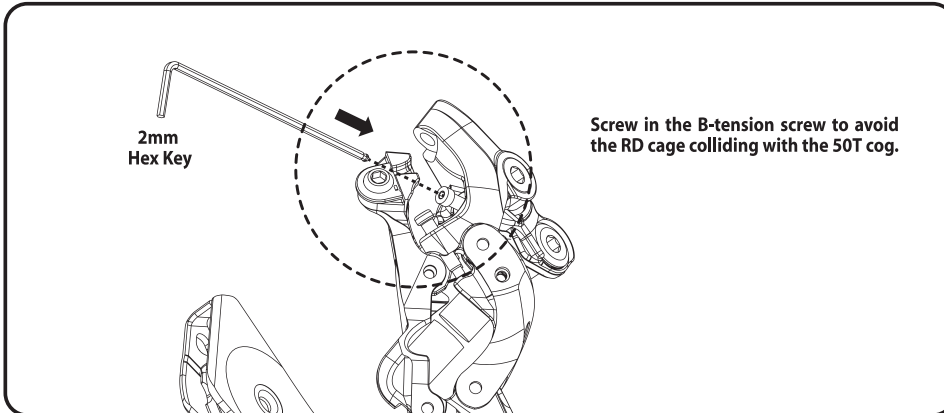

FLW